

## Magnetic Trip Alarm

Magnetic Trip Alarm				
Code	Type	Description	Applicable	Contacts
LA2A	LA	Side Mount LHS	MMS-32 -	2NO
LA2B			MMS-100	2NC



LA



RS

## Shunt Release

Shunt Release				
Code	Type	Description	Applicable	Voltage
RS24V	RS	Side Mount RHS	MMS-32 - MMS-100	AC24V
RS110V				AC110 - 127V
RS240V				AC240V
RS415V				AC415 - 440V

**Cannot be used in combination with RU**



RU

## Under Voltage Release

Code	Type	Description	Applicable	Voltage
RU24V	RU	Side Mount RHS	MMS-32 - MMS-100	AC24V
RU110V				AC110 - 127V
RU240V				AC240V

**Cannot be used in combination with RS**

## IP65 Enclosure

Code	Applicable	Description
MMS-EPH32-65H	MMS-32H ~ MMS-100S	Enclosure surface mount IP65



MMS-EPH32-65H